

Zero Client DVD Player Bundle Quick Start Guide

About the DVD Player Bundle

The Zero Client DVD Player Bundle includes a DVD player (reader/writer) and a ClearCube zero client. Use the player to read and write DVDs and CDs when connected to a remote blade or VM. Your zero client might look different than the one shown below.



Supplying Power

The DVD player is powered by a zero client USB port. As shown in the picture below, use the included USB-to-mini-USB cable to connect the DVD player to the zero client. Your zero client might look different than the one shown below.



Opening and Closing

To open: Press the Open button (shown above) on the front of DVD tray.

NOTE: To open the DVD player, the zero client must establish a PCoIP session with a remote host (such as a blade or VM). When a PCoIP session is established, the zero client power button is green, and the PCoIP session indicator is green. After a session is established with a remote host, the zero client USB ports enumerate and the DVD player can open. See the included zero client *Quick Start Guide* for information about establishing a PCoIP session.

The DVD tray does not open when the zero client is in standby mode (indicated by an orange power button).

To close: Push the tray inward until it locks in place.

Manual eject: If the DVD tray does not open after pressing the button, gently insert a thin object (such as a straightened paper clip) into the manual eject opening. This operation releases the tray.

Continued on next page

Zero Client DVD Player Bundle Quick Start Guide, Continued

Supported Media and Speeds

The table below shows the DVD player's supported media types and maximum speeds for each operation.

Media Family	Operation	Media Type	Speed
DVD	Write	DVD+R	8× maximum
		DVD-R	8× maximum
		DVD+R DL	6× maximum
		DVD-R DL	6× maximum
		DVD-RAM	5× maximum
	Read	DVD-ROM	8× maximum
	Rewrite	DVD+RW	8× maximum
		DVD-RW	6× maximum
CD	Write	CD-R	24× maximum
	Read	CD-ROM	24× maximum
	Rewrite	CD-RW	24× maximum

Contacting Support

Web	www.clearcube.com/support/
Email	support@clearcube.com
Toll-free	(866) 652-3400
Direct	(512) 652-3400